

HART DYNAMICS TRIGGER SETTINGS FOR ROLAND TD-6/TD-6V__4/1/05 TE3.2									
NOTE: Only highlighted (grey) settings need to be altered from factory settings.									
PRODUCT	PAD TYPE	BASIC			ADVANCED				
		SENS	THOLD	CURV	XTALK	SCAN	RTRG	MASK	RIM SENS
HART PRO SNARE HH TE3.2®	PD-120	5	1	LINEAR	30	1.6	3	8	10
HART PRO KICK HH TE3.2®	KD-TYPE	10	4	LINEAR	20	2.0	5	4	NA
HART PRO TOM 8" HH TE3.2®	PD80/100	4	3	LINEAR	60	1.0	3	8	NA
HART PRO TOM 10" HH TE3.2®	PD80/100	4	3	LINEAR	60	1.0	3	8	NA
HART PRO TOM 12" HH TE3.2®	PD-120	4	3	LINEAR	60	1.6	3	12	NA
HART PRO KICK BL TE3.2®	KD-TYPE	10	4	LINEAR	20	2.0	5	4	NA
HART PRO TOM 8" BL TE3.2®	PD80/100	4	3	LINEAR	60	1.0	3	8	NA
HART PRO TOM 10" BL TE3.2®	PD80/100	4	3	LINEAR	60	1.0	3	8	NA
HART PRO TOM 12" BL TE3.2®	PD-120	4	3	LINEAR	60	1.6	3	12	NA
ACUPAD IS/IIS/IIST TE3.2®	PD-120	7	1	LINEAR	60	2.0	3	4	7 *
HMK (HAMMER KICK)	KD-TYPE	4	4	LINEAR	OFF	2.0	5	8	NA
ACUPAD BDS/ST TE3.2®	KD-TYPE	8 13	3	LINEAR	20	2.0	5	4	NA
9" ECYMBAL II	CY-6	10	3	LINEAR	30	2.0	3	8	NA
12" ECYMBAL II	CY-6	10	3	LINEAR	30	2.0	3	8	NA
12" ECYMBAL II (choke)	CY-6	10	3	LINEAR	30	2.0	3	8	NA
14" ECYMBAL II	CY-6	10	3	LINEAR	30	2.0	3	8	NA
14" ECYMBAL II (choke)	CY-6	10	3	LINEAR	30	2.0	3	8	NA
16" RIDE ECYMBAL II	PD120	10	2	LINEAR	60	1.6	3	8	NA
ECII RIDE BELL	CY-6	3	9	LINEAR	60	2.0	3	8	NA
12" HH ECYMBAL II	PD80/100	10	3	LINEAR	60	1.5	3	8	NA
12" ECYMBAL II CHINA	CY-6	10	3	LINEAR	30	2.0	3	8	NA
14" ECYMBAL II CHINA	CY-6	10	3	LINEAR	30	2.0	3	8	NA
9" ECYMBAL S	CY-6	10	3	LINEAR	30	2.0	3	8	NA
12" ECYMBAL S	CY-6	10	3	LINEAR	30	2.0	3	8	NA
12" ECYMBAL S /CHOKE	CY-6	10	3	LINEAR	30	2.0	3	8	NA
14" ECYMBAL S	CY-6	10	3	LINEAR	30	2.0	3	8	NA
14" ECYMBAL S /CHOKE	CY-6	10	3	LINEAR	30	2.0	3	8	NA
12" ECYMBAL S HH	PD80/100	10	3	LINEAR	60	1.5	3	8	NA
16" ECYMBAL S RIDE	PD120	10	2	LINEAR	60	1.6	3	8	NA
ECS RIDE BELL	CY-6	3	9	LINEAR	60	2.0	3	8	NA
12" ECYMBAL S CHINA	CY-6	10	3	LINEAR	30	2.0	3	8	NA
14" ECYMBAL S CHINA	CY-6	10	3	LINEAR	30	2.0	3	8	NA
HM6MT (MULTIPAD)	PD80/100	5	3	LINEAR	80	1.0	4	8	NA
HM1-C (HAMMER PAD)	PD80/100	8	3	LINEAR	60	1.0	3	4	NA
* Rim Sensitivity is only adjustable on Snare Drum input (input 2)									